






LifeSize[®] Icon[™] Configuration Overview

After installation, configure your video system using the remote control and from the system's web interface:

1. Open a web browser.
2. Navigate to the system IP address. This appears in  on the main screen.
3. To learn about your system's configuration preferences, click **Help**.

Initial Configuration Tasks

Configuration	Description	Read More
Administrator passwords	BROWSER: Manage administrator passwords in Preferences > Passwords . The default username and password for HTTP and SSH access are <i>admin</i> . The default passcode to access a limited set of administrator functions from the video system's display is <i>1234</i> .	<i>LifeSize Icon Video System Guide</i>
Date and time	BROWSER: Set the system date and time and time zone in Preferences > Date and Time .	Help
Language	BROWSER: Select the language for the system's interface in Preferences > Appearance . REMOTE CONTROL: Select  >  . To change the language of your system's web interface, select Language in the login screen of the web interface.	Help
System name	BROWSER: Define the system name in Preferences > System .	Help
Safe area	REMOTE CONTROL: If the day, date, and time are not fully visible in the upper right corner of your video system's display, select  >  to adjust the safe area.	Help
Dual displays	BROWSER: If your video system is connected to two displays, select your display configuration in Preferences > Appearance > Physical Display Arrangement . Connecting a second display requires a license key. Contact your LifeSize representative for details.	Help
H.323	BROWSER: If you are using H.323 gatekeepers and want to place calls using a name or extension with the H.323 protocol, configure your LifeSize system to use H.323 in Preferences > H.323 .	Help
SIP	BROWSER: If you are using SIP servers, configure your LifeSize system to use SIP in Preferences > SIP Registrar 1 and Preferences > SIP Registrar 2 .	Help
Calls, audio, and video	BROWSER: Configure call, audio, and video preferences: <ul style="list-style-type: none">• Preferences > Calls• Preferences > Audio• Preferences > Video	Help
Firewall	Configure your video system for firewall traversal.	<i>LifeSize Icon Video System Guide</i>
Automatic provisioning	Set up your video system to discover an available provisioning server and to configure itself with settings that are specified on the server.	<i>LifeSize Icon Video System Guide</i>
DHCP	By default, DHCP is enabled on LifeSize systems. If you disable DHCP, you must specify the system's IP address, subnet mask, and default gateway in Preferences > Network .	<i>LifeSize Icon 600 Installation Guide</i>
Integrations	Integrate your LifeSize video system with the UVC suite of applications and LifeSize Bridge.	<i>LifeSize Icon Video System Guide</i>